


IN-DASH DOUBLE DIN INSTALLATION KIT FOR 2005-UP KIA SPORTAGE

6598 LEFT
ISO MOUNTING
BRACKET

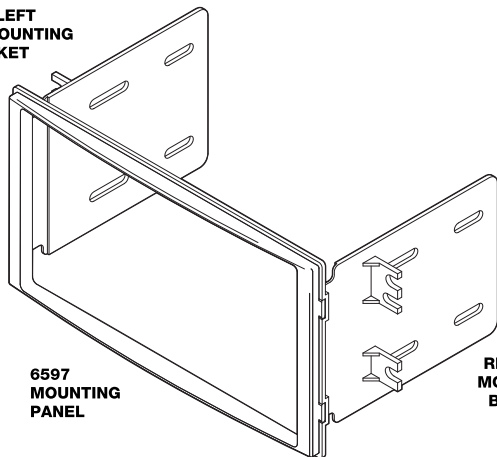

6597
MOUNTING
PANEL

6599
RIGHT ISO
MOUNTING
BRACKET

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2005-Up Kia Sportage vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: www.scosche-cars.com

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

HY07B

2005-Up
Kia Sportage

HY08B

2005-Up Kia Sportage
Premium Sound

HY07B



HY08B



LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (KA2094B) in 2005-Up Kia Sportage vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

FACTORY STEREO REMOVAL

2005-UP KIA SPORTAGE


1. Using a panel removal tool, remove the trim around the stereo and climate control knobs. Lift away, disconnect and remove.
2. Extract (4) Philips screws securing factory stereo. Lift away, disconnect and remove.

MOUNTING THE STEREO

DOUBLE DIN ISO MOUNT

1. Align right side 6599 mounting bracket & left side 6598 mounting bracket with 6597 kit panel. Place mounting brackets with matching locating holes on kit panel (2 locating holes on each side).
2. Align Double Din head unit. Use hardware supplied with stereo to bolt onto kit assembly. **Note:** If hardware is not supplied with aftermarket stereo use hardware from factory stereo.

NOTE:
REAR SUPPORT AVAILABLE
SEPARATELY. REAR
SUPPORTING THE STEREO
ADDS TO THE INSTALLATION'S
STRUCTURAL INTEGRITY.

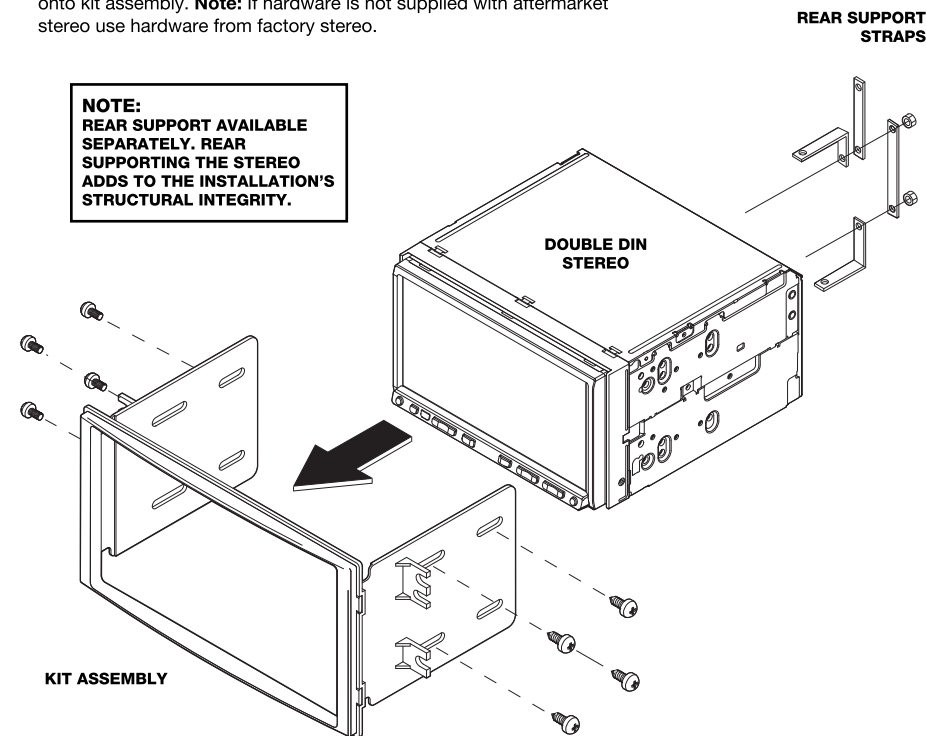

REAR SUPPORT
STRAPS

DOUBLE DIN
STEREO

KIT ASSEMBLY